



**Manual for the internal Expression-Wheel-Modification
for Line 6 Stompbox Modeler or M-Series:**

The Expression-Wheel has the same function as an expression-pedal.

If you connect an expression pedal at the 1/4" (6,3mm) jack of your Stompbox Modeler/ M-Series, the internal Expression-mod is not working!

Workflow to guarantee full functionality!

- turn the Expression-Wheel counter clockwise to its endposition
- choose a saved preset and turn the Expression-Wheel clockwise to its endposition
- adjust one or more parameters of this chosen preset (all parameter except the model-selector can be adjusted)
- now, you can control infinitely variable between this two adjustments
- the next step is to save this preset by holding down the preset-footswitch until the LED is blinking

Have a lot of fun with your modded Line 6 Modeler and thank you very much for the confidence you have placed in us!

Stay Tuned!